

Coffs Canvas

1 Keona circ Coffs Harbour N.S.W 2450
Ph 0266512960 F 0266500758
E coffscan1@bigpond.com
W www.coffscanvas.com.au

MEASURING INSTRUCTIONS

STEP 1

- Erect Roll-out awning
- Ensure roller is set at the predetermined Height to suit the wall measurements before Tightening roll-out awning arms(usually 1920mm)
- Ensure roller is set at the **9 o'clock** position
- This may have to be rotated manual
- See diagram 1 (below)

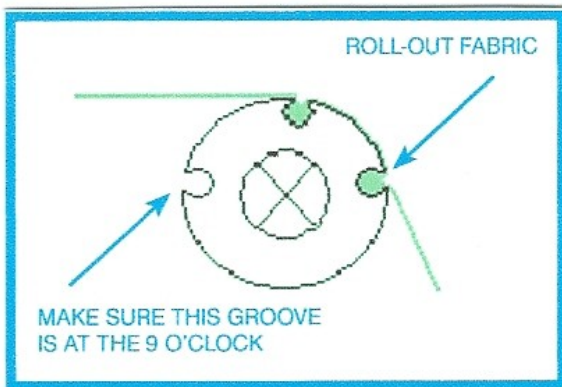


Diagram 1

STEP 2

- Measure height of long wall by measuring the from The groove in the 9 o'clock position to ground (usually around 1920mm) see number **2**(figure 2).

STEP 3

- Measure length of awning by measuring from one Edge of vinyl to the other (from front to back) See number **3** (fig 2)

STEP 4

- Measure width of awning by measuring horizontally From caravan to rope groove in the 9 O'clock position. See number **4** (fig 2)

STEP 5

- Measure height against caravan by measuring from Awning to ground over caravan axle. See number **5** (fig 2)

Place measurements where numbers are

